

ES-210

欢迎使用

PENTAIR
PENTAIR

PENTAIR() EVERPURE()

目录

1. 安全提示	
2. 开箱检查	
3. 产品介绍	
3.1	
3.2	
3.3	
3.4	
4. 安装说明	
4.1	
4.2	
4.3	
4.4	
5. 使用说明	
5.1	
5.2	
5.3	
5.4	
5.5	
6. 保修服务	
6.1	
6.2	

1. 安全提示

-
-
-
-
-
- 100%
- , O
-
-
-
-
-
-
-
- 2~49
-

2. 开箱检查

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.



3. 产品介绍

3.1 产品用途


— 2001

3.2 原理图


3.2.1

→


→

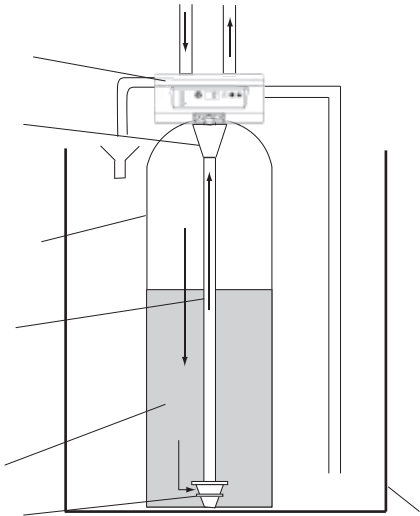

3.2.2

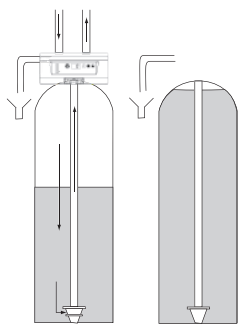

3.2.3

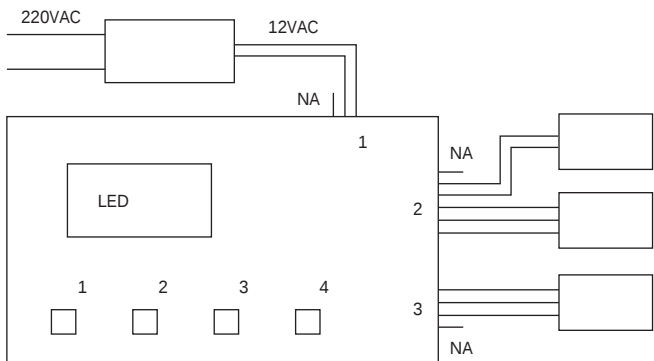

3.3 技术参数

	ES-210
/	3/4"(25mm)BSPT
	0.14 0.35MPa
	0.9m³/h
	1.5m³
	8000m³
	2001
	12L
	10kg
	220V~50Hz
	8W
	4 38
	2 49
* *	500*280*510mm
	1/2"(12.7mm)
	3/8"(9.5mm)

3.4 主要成分或部件

		/			
1		0.6-0.8mm		12L	10
2		250mm 400mm		1	10
3		25L		1	10
4		222mm × 222mm × 119mm	+	1	10
5		Φ25mm	PVC	1	10
6		Φ25	ABS	1	10
7		Φ25	ABS	1	10

4. 安装说明

4.1 安装注意事项

-
- - a). 55cm × 30cm
 - b). 66cm
 - c). 40-160cm


- d). 10.2cm
- e). / 220V~50Hz
- f). 8W
- g). 2m
- h).
- j). 4°C 38°C
- k). 0.14MPa 0.35MPa

- 2°C 49°C
-
- 40-160cm 10cm
-
- 0.14 0.35MPa
-
-
-
- 10
- Y
- 6m

4.2 安装准备

工具准备：

4.3 安装示意图

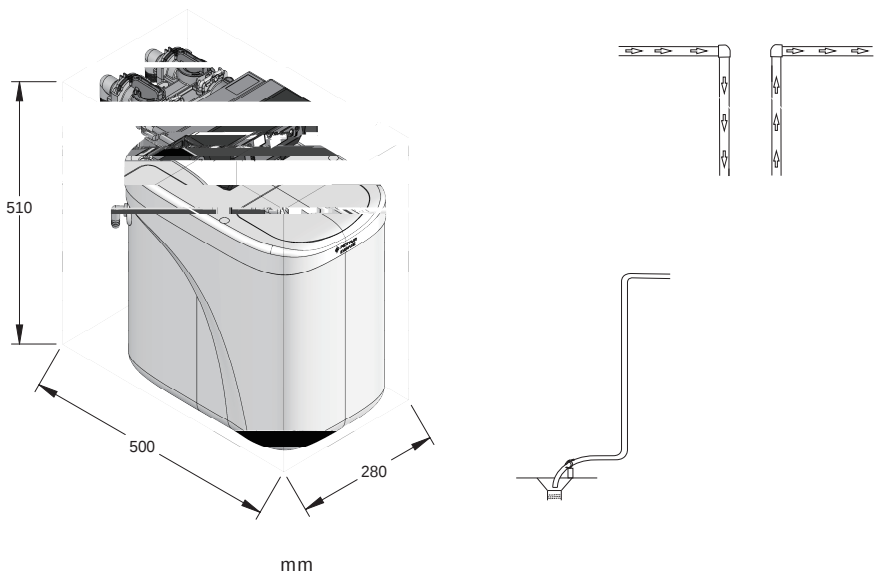

4.4 安装步骤

4.4.1

接入接头前注意：


- ○
- 100% ○

需移除卡夹时：

-
-
-

4.4.2

-
-
-
-
-
-

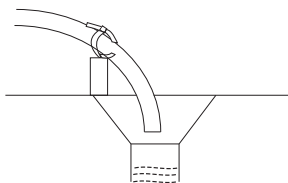

4.4.3

- 1/2"
-



4.4.4


5



5. 使用说明

5.1 调试及设置

5.1.1

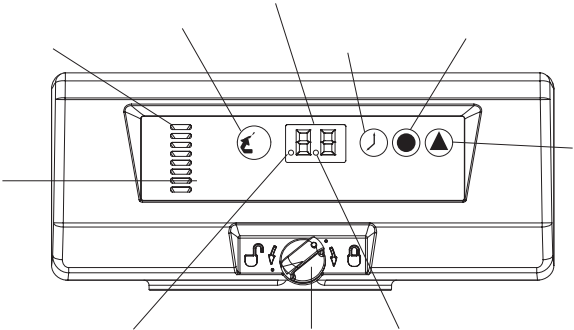

5.1.2

⌚		
0 23		
●		
0.20kg 6.0kg		
0.20kg	1.0kg	0.05kg
1.0kg	3.0kg	0.1kg
3.0kg	6.0kg	0.5kg
▲		
0.40 9.5m³		
0.4m³	1.0m³	0.05m³ 12
1.0m³	3.0m³	0.1m³ 20
3.0m³	5.0m³	0.2m³ 10
5.0m³	9.5m³	0.05m³ (10
5		

5.1.3



2 00)



3

--

5.1.4



3

“ C1 ”



“ C2 ”

2 3

3

- 1.
- 2.
- 3.
- 4.

5.1.5

4

1.

2.

3.

4.5

⌚

●

“ u ”

3

1.

2.

3.

4.

5.

⌚

●

“ u ”

3

“ 0 ”

5

1-4

1

u1	
u2	
u3	
u4	
u0	

5.1.6

♻️

⬆️

3

⬆️

0=

0.3= 8

0.5= 12

1-30=

- Err3
- u1 0.6kg

ES-210	
ppm	T
50	8.00
100	4.00
150	2.67
200	2.00
250	1.60
300	1.33
350	1.14
400	1.00
450	0.89
500	0.80
550	0.73
600	0.67
650	0.62
700	0.57
750	0.53
800	0.50
kg	0.6

- 4~5L
- “ ”
- 3 [] C1 1/4
- ,
- C2
- C7



5.1.8

/

5.2 使用方法

“ ”

<0.3mg/L

<3NTU

0.14MPa

0.6MPa

●

8

●

30

4

5

●


•

•

•

5.5 故障诊断及排除

	#4	
	#4	
	O	O
		20 psi 1.3 bar

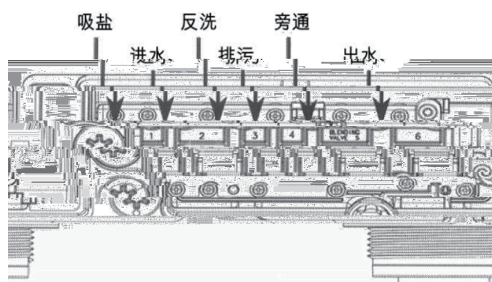

● -

Err 1		Err 1
Err 3		
	Err 3	1. 2.
	5	1. 2.

6. 保修服务

6.1 保修卡



保 修 卡

1

1

2

3

4

-
-
-
-
-
-
-

5

6

7

8

800-820-6671

400-820-6671

09:00-19:00

